

# Messaging Gateway -TAP Interface Manual

## 1. Connecting to the Service

### A. Basic Connectivity Parameters

#### 1) Access Details

TeleMessage will be the Server (Receiver) side and act as carrier gateway. The client should call the number to send his messages to the following addresses:

Item	Type	Access Number
Production	Receiver 1	Provided by Account Manager

#### 2) Supported Connection Details

Baud Rate: 1200 / 2400  
Data Bits: 7  
Parity: Even  
Stop Bits: 1  
Modulation: V.22  
Error Correction: Disabled  
Data Compression: Disabled

#### 3) Guidelines

- a. Please make sure to add 1 to the prefix of each destination number you will be sending messages to.
- b. Please provide TeleMessage with a list of all destinations so that we could white list them with the carriers.
- c. Our TAP numbers are in New Jersey. Please make sure your TAP lines can call to here.
- d. If you have a digit to access an outside line, e.g. 9, please make sure to include it if your TAP line goes through your office switchboard.